 



# PLATINUM ERGO

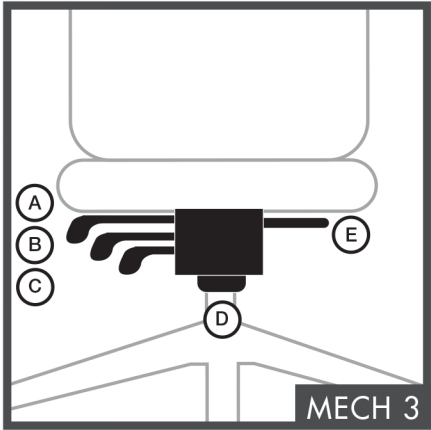

## A SEAT HEIGHT ADJUSTMENT


**To lift:**  
Remove body weight from seat, press lever upwards.

 **To lower:**  
Sit on seat, press lever upwards.

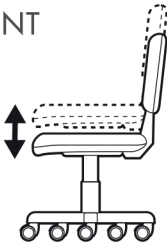

## B SEAT TILT

 Lift lever, lean backwards or forwards to desired position. Press lever downwards to lock.

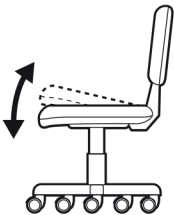


## C BACK ANGLE ADJUSTMENT

Lift lever to release, when backrest is in desired position, press lever down to locked position.




## D MECHANISM TENSION ADJUSTMENT

 Turn handle clockwise to increase tension and then anti-clockwise to release.

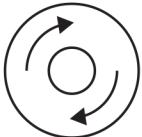


## E SEAT DEPTH ADJUSTMENT

 Lift lever to release, push forward or backward to desired position, release to lock.

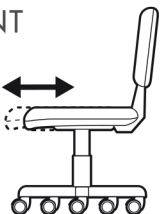

## ARMS

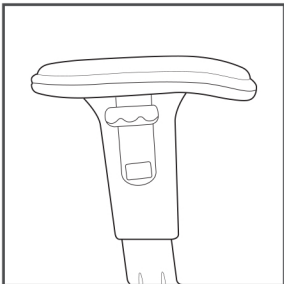 

### A8

Black Height Adjustable Arms

Lift Lever to Adjust Height

Adjustment: 